



TWC MPUMALANGA TRADING t/a THE WATER COMPANY
Reg no: 2025/900737/07

Unit 23
Central Park
12 Suikerriet street
Mbombela
MPUMALANGA
1201
072 264 4193

Purolite™ A520E

Polystyrenic Macro porous, Quaternary Ammonium Strong Base, Anion Resin, Chloride form, Potable Water Grade.

PRINCIPAL APPLICATIONS

- Nitrate Removal

REGULATORY APPROVALS

- French Health Ministry Approval for Potable Water Treatment
- Kosher Certified
- Certified by the WQA to NSF/ANSI-61 Standard
- Drinking Water Inspectorate Approved for Use in Public Water Supply in the UK
- Water Regulations Advisory Scheme Approved

TYPICAL PACKAGING

- 1 ft³ Sack
- 25 L Sack
- 5 ft³ Drum (Fiber)
- 1 m³ Super sack
- 42 ft³ Super sack

TYPICAL PHYSICAL & CHEMICAL CHARACTERISTICS:


Polymer Structure	Macroporous polystyrene cross linked with divinylbenzene
Appearance	Spherical Beads
Functional Group	Quaternary Ammonium
Ionic Form	Cl form
Total Capacity (min.)	0.9 eq/L (19.7 Kgr/ft ³) (Cl form)
Moisture Retention	49 - 56 % (Cl form)
Particle Size Range	300 - 1200 µm
< 300 µm (max.)	1 %
Uniformity Coefficient (max.)	1.7
Specific Gravity	1.07
Shipping Weight (approx.)	675 - 705 g/L (42.2 - 44.1 lb/ft ³)
Temperature Limit	100 °C (212.0 °F) (Cl form)

Hydraulic Characteristics

PRESSURE DROP

The pressure drop across a bed of ion exchange resin depends on the particle size distribution, bed depth, and voids volume of the exchange material, as well as on the flow rate and viscosity of the influent solution. Factors affecting any of these parameters— such as the presence of particulate matter filtered out by the bed, abnormal compressibility of the resin, or the incomplete classification of the bed—will have an adverse effect, and result in an increased head loss. Depending on the quality of the influent water, the application and the design of the plant, service flow rates may vary from 10 to 40 BV/h.

PRESSURE DROP ACROSS RESIN BED

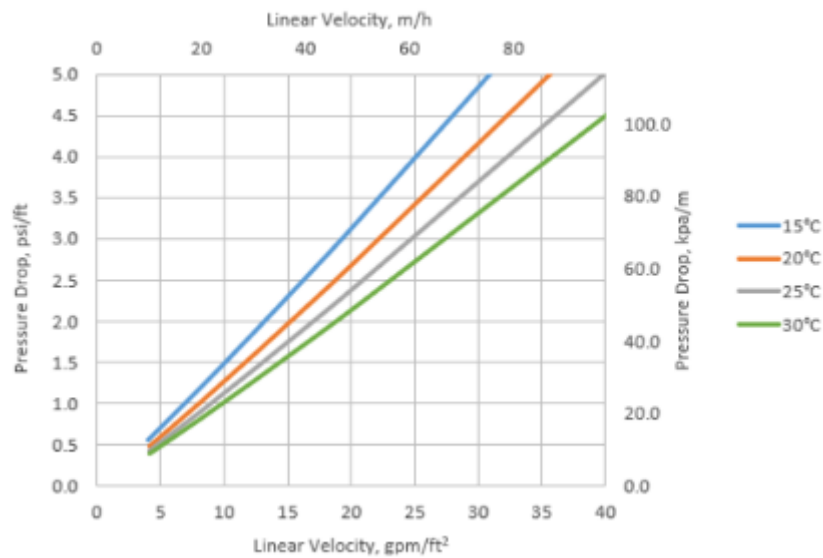

BACKWASH

During up-flow backwash, the resin bed should be expanded in volume between 50 and 70% for at least 10 to 15 minutes. This operation will free particulate matter, clear the bed of bubbles and voids, and reclassify the resin particles ensuring minimum resistance to flow. When first putting into service, approximately 30 minutes of expansion is usually sufficient to properly classify the bed. It is important to note that bed expansion increases with flow rate and decreases with influent fluid temperature. Caution must be taken to avoid loss of resin through the top of the vessel by over expansion of the bed.

BACKWASH EXPANSION OF RESIN BED

